

"NG" Next Generation

NYLON CASTERS - THE INSIDE STORY

**CUSTOM
COLORS**



**3" TO 6" WHEEL DIAMETER
MODELS NOW AVAILABLE**



COMPETITOR Y




Double ball bearings works great with metal casters ... but can lead to premature wear of the raceways and increased shimmy on plastic models.

COMPETITOR Z



Friction ring attachment design wears directly on the plastic race which can increase shimmy and in many cases the stem can come out of the caster causing a catastrophic failure.


MEDCASTER

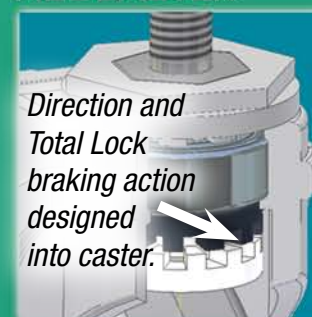

Direction and Total Lock braking action designed into caster.

MedCaster NG series has a precision sealed ball bearing raceway design for long lasting, smooth, quiet, maintenance free ride. Precision ball bearings are insert molded into the swivel raceway. This design allows capacity to be similar to or in some cases greater than metal casters.

PERFORMANCE FEATURES

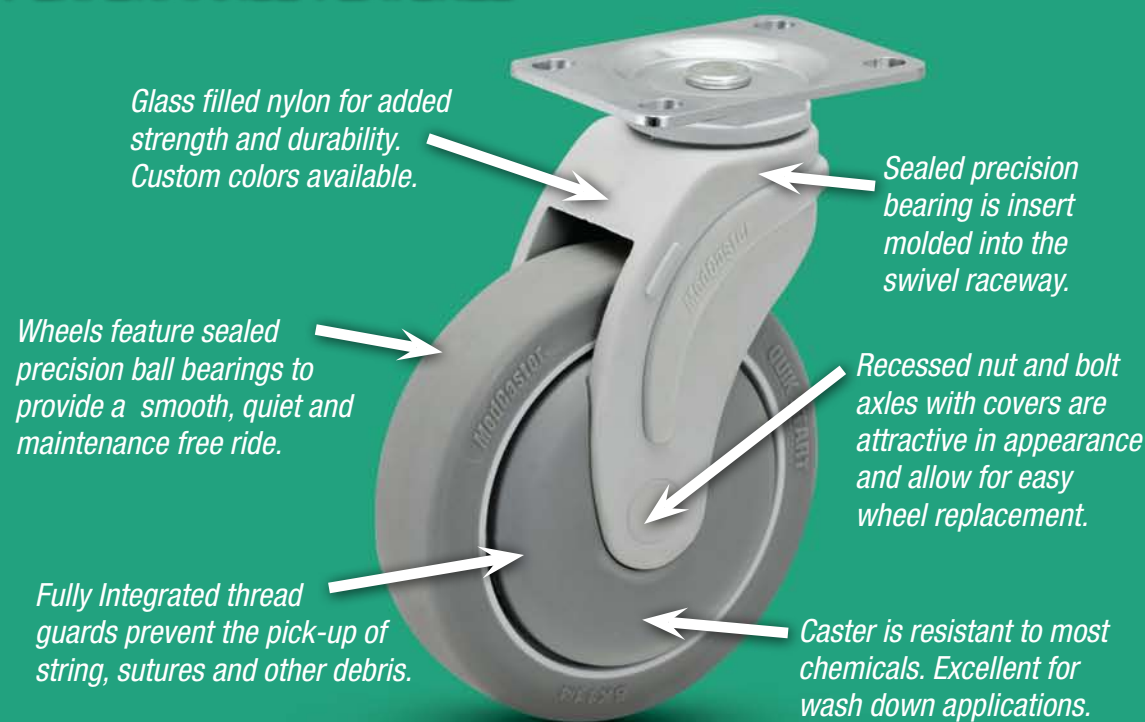

Glass filled nylon for added strength and durability. Custom colors available.

Sealed precision bearing is insert molded into the swivel raceway.

Wheels feature sealed precision ball bearings to provide a smooth, quiet and maintenance free ride.

Recessed nut and bolt axles with covers are attractive in appearance and allow for easy wheel replacement.

Fully Integrated thread guards prevent the pick-up of string, sutures and other debris.

Caster is resistant to most chemicals. Excellent for wash down applications.

YOUR CHOICE OF PERFORMANCE OPTIONS



NS 304 Stainless Steel Caster components (blue cap)



NA anti-static casters (yellow cap)



Antimicrobial casters (green cap)

YOUR CHOICE OF LOCKS



Total Lock locks both wheel and swivel for complete breaking action.



Direction Lock locks swivel only for easy steering.

RIGID



New Rigid plate and stem models

YOUR CHOICE OF FITTINGS



MedCaster
www.medcaster.com



MedCaster, Inc. • 800 N. Clark Street • Albion, MI 49224
Phone: 866-462-9700 • Fax: 517-686-1072
Email: info@medcaster.com • www.medcaster.com



INTRODUCING MEDCASTER'S
COMPLETE LINE OF NG NYLON CASTERS

Next Generation

IT'S THE INSIDE
STORY THAT COUNTS...



NEW
RIGID
MODELS



QUIET • CLEAN • SMOOTH • MAINTENANCE FREE